


A Flis Kits

DESIGN of the Month Entry

Torpedo

by
Scott CLEMENT

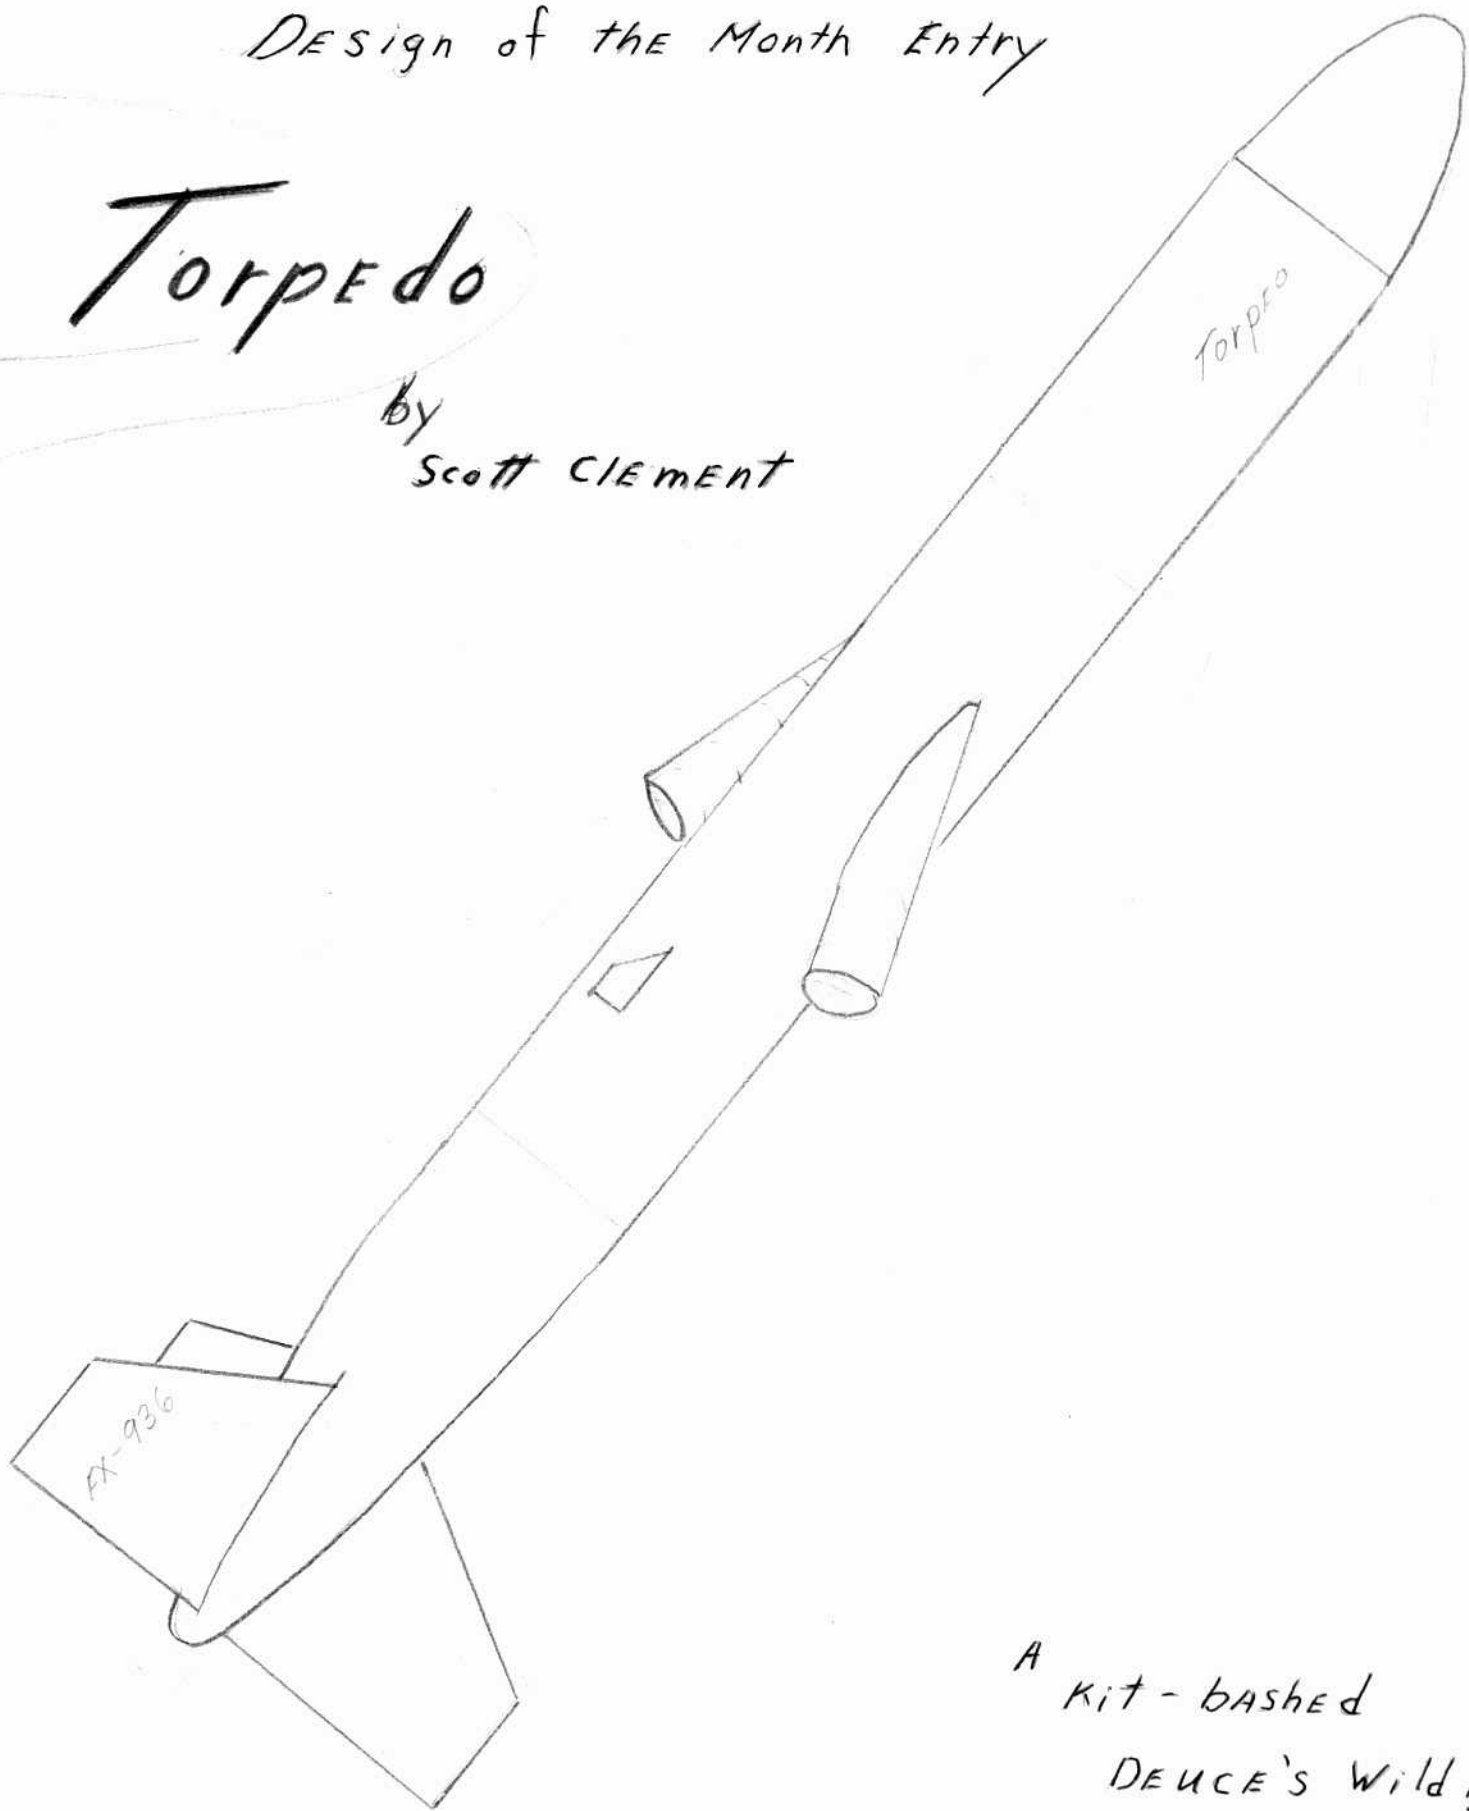

A Kit-bashed
DEUCE'S Wild!
FlisKits

Torpedo

DESIGNED
by SCOTT CLEMENT

Instructions

THE Torpedo is a kit bashed DEUCE'S Wild!

F1is Kit.

First follow the ENGINE mount ASSEMBLY steps 1 thru 7 in the DEUCE'S Wild! instruction SHEET. Next use marking guide-A and PLACE it on the END of the $9\frac{1}{4}$ " long body tube to TRACE the ENGINE cut out AREA and to draw the LAUNCH lug lines ALONG the full length of the body tube. Next follow step 10 in the DEUCE'S Wild! instructions. Next use MARKING Guide B on the $3\frac{1}{2}$ " long body tube. PLACE on the END of the tube and TRACE out both REAR END ENGINE cut out AREAS and mark the THREE tail fin lines and LAUNCH lug lines. Next, using the tube COUPLERS template PLACE it horizontally on the OUTSIDE of the SCRAP PIECE of body tube and TRACE and cut out two COPIES. Next you will NEED to GLUE them in BETWEEN the two ENGINE tubes and PLAT up AGAINST

the inside short body tube wall while seating them on top of the lower ring of the engine assembly. BE SURE they are completely on the same plane as the body tube wall. CA glue is a good choice here. NEXT USE MARKING GUIDE - B on the $3\frac{1}{2}$ " body tube. cut out and trace the two REAR engine cut out AREAS. Also mark out the three tail fins, one shark fin and the launch lug lines. The tail fin lines should be extended on to the plastic tail cone when it gets glued on. With the engine cut out AREAS REMOVED, slide the tube on to the coupler of the $9\frac{1}{2}$ " section making any adjustments needed for a good fit and alignment of the launch lug lines and engine cut out AREAS. THE REST of the ASSEMBLY is STRAIGHT FORWARD. TRACE out the three REAR fins using the template. NOTE the grain direction and root edge for proper cut, strength and gluing. THEN glue on the fins on the lines you EXTENDED onto the nose cone. NEXT glue on the launch lugs AS PICTURED and marked. THE SHARKS fin can be cut out of thin piece of water glass or a lid from a yogurt container AND glued on the opposite side

of the tube as the rear launch lug. NEXT
Follow steps 15, 17, 18 from the DEUCE's Wild! instruction
sheet for the recovery system.

MAY your Torpedo always be on
TARGET.